

START HERE



Windows 98, ME, 2000, XP



Make sure you are using the correct side of the poster.

Windows users: Follow the steps in order. Do not connect the USB cable until instructed to do so.

See your box for exact contents and system requirements.

1

Turn your PC on




Windows desktop

- Turn your PC on and wait for the Windows desktop to appear.
- Close any open programs, including virus-checking programs.


2

Install the software first

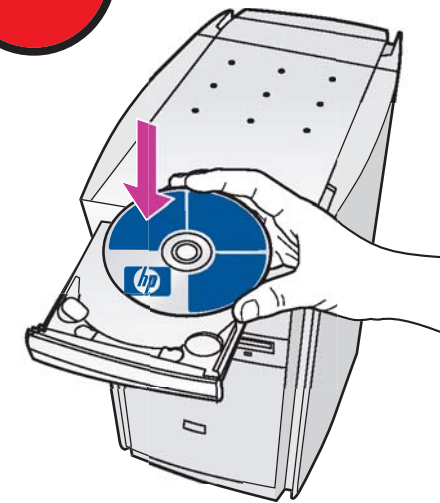

- Insert the HP PSC software CD.
- Follow the onscreen instructions.




- Do not connect the USB cable at this time. Please wait while the software installs files. This can take up to 20 minutes on slow PCs. When you see the screen to the right, continue to step 3.

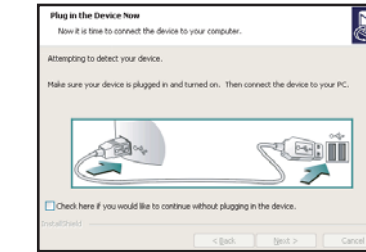

If nothing appears on your computer screen after inserting the CD, search for setup.exe on the CD and double-click the file.

3



Attach the front-panel overlay

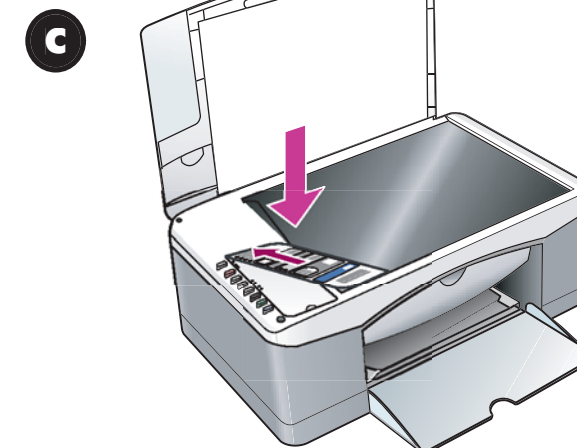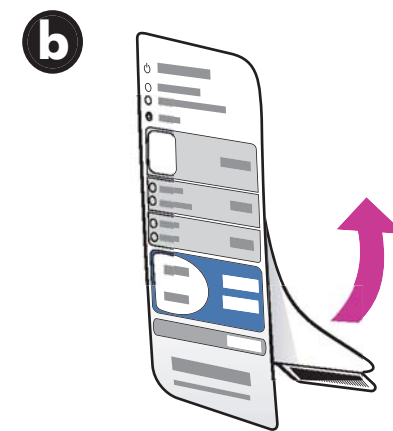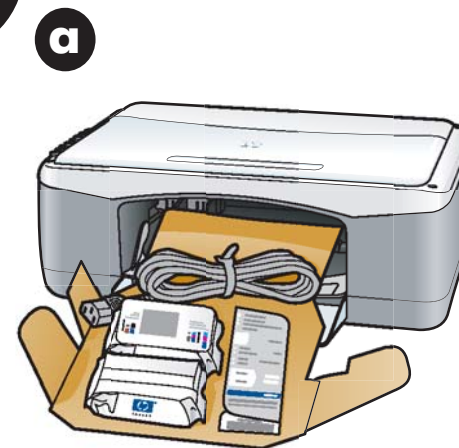

- Lower the input tray and the print cartridge access door. Remove the packaging. Close the print cartridge access door.
- Remove the front-panel overlay from the barcode backing.
- Raise the lid. Align the overlay with the recessed area on the unit next to the buttons. Press the overlay firmly into place.


4

Load plain white paper

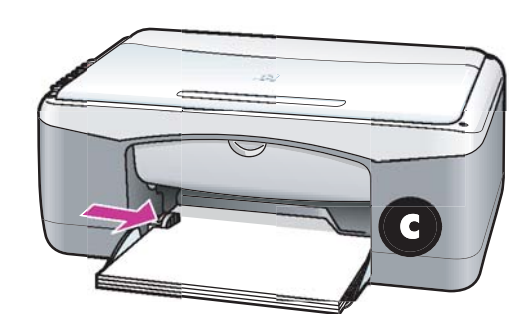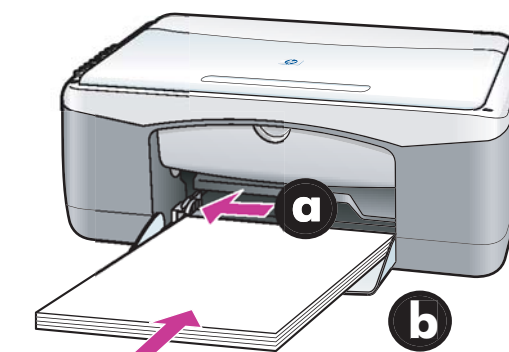


5

Connect the USB cable and the power cord

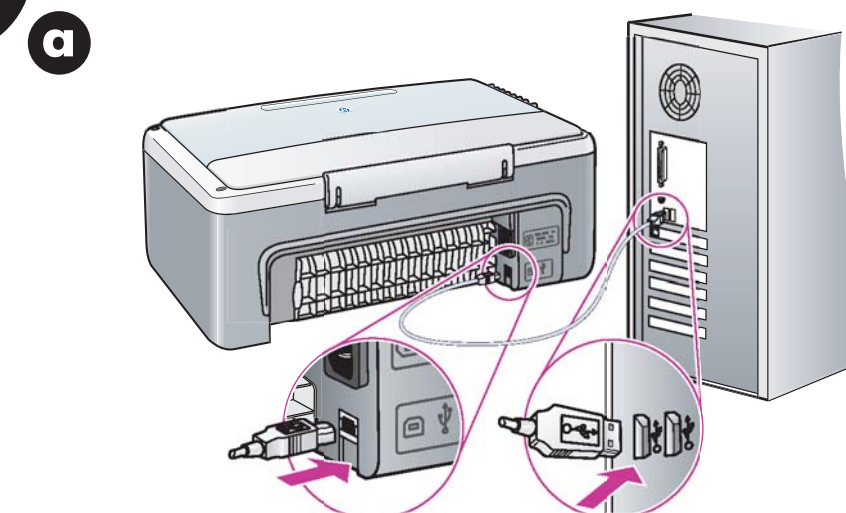


Do not connect the USB cable until you see the screen in Step 2. Do not connect the USB cable to a keyboard or non-powered hub.

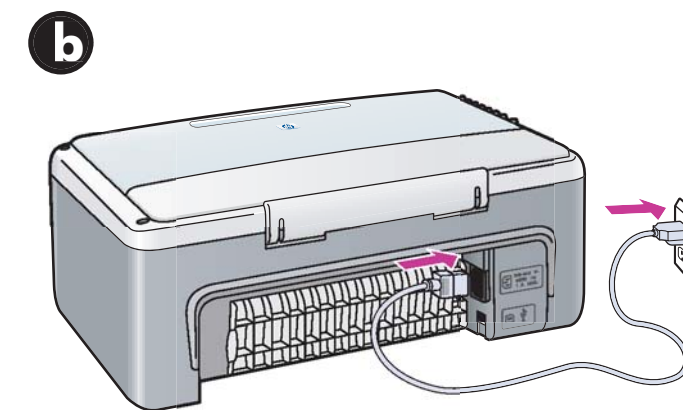

6


Turn on your HP PSC

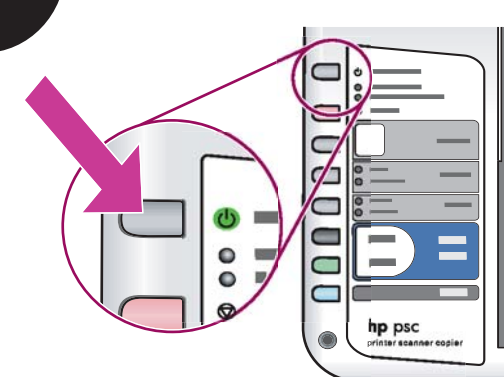


The On light button turns green. This may take a few seconds.

7

Insert the print cartridges



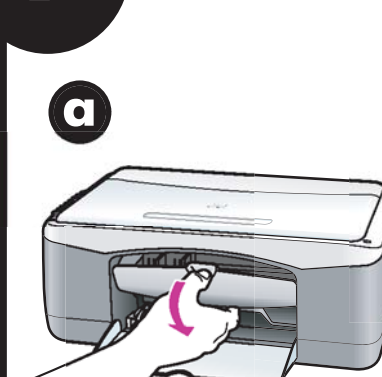


- Pull the print cartridge access door down. Wait for the print cartridge to move to the center.

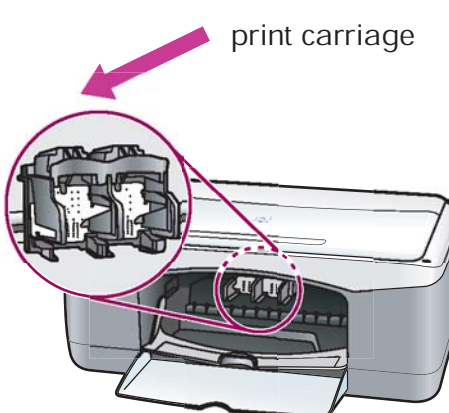

7

Insert the print cartridges (continued)

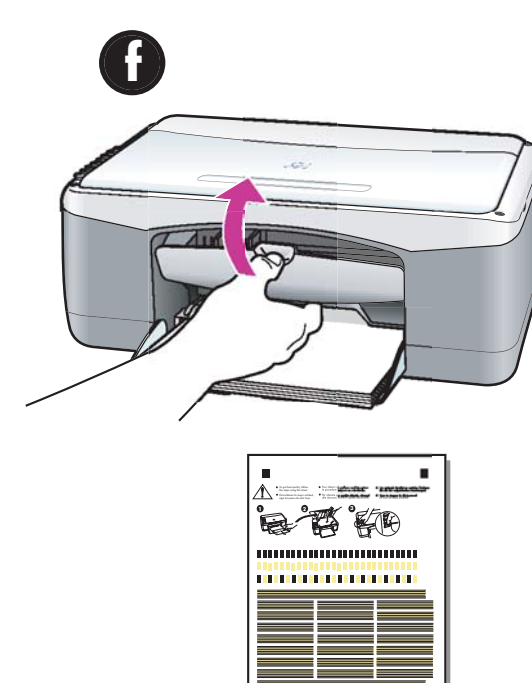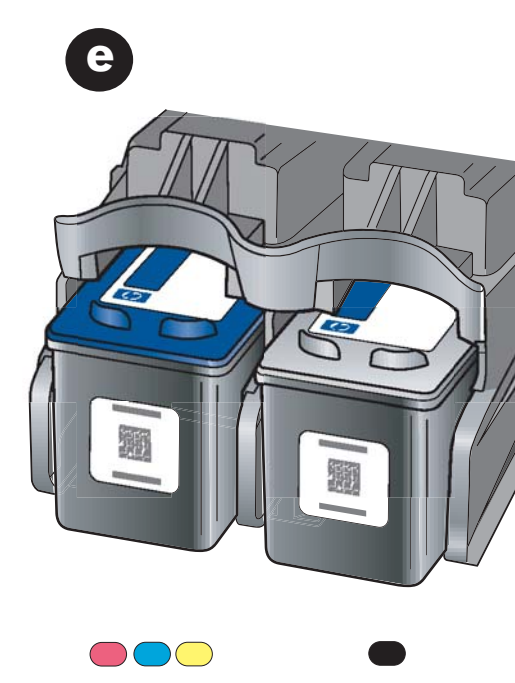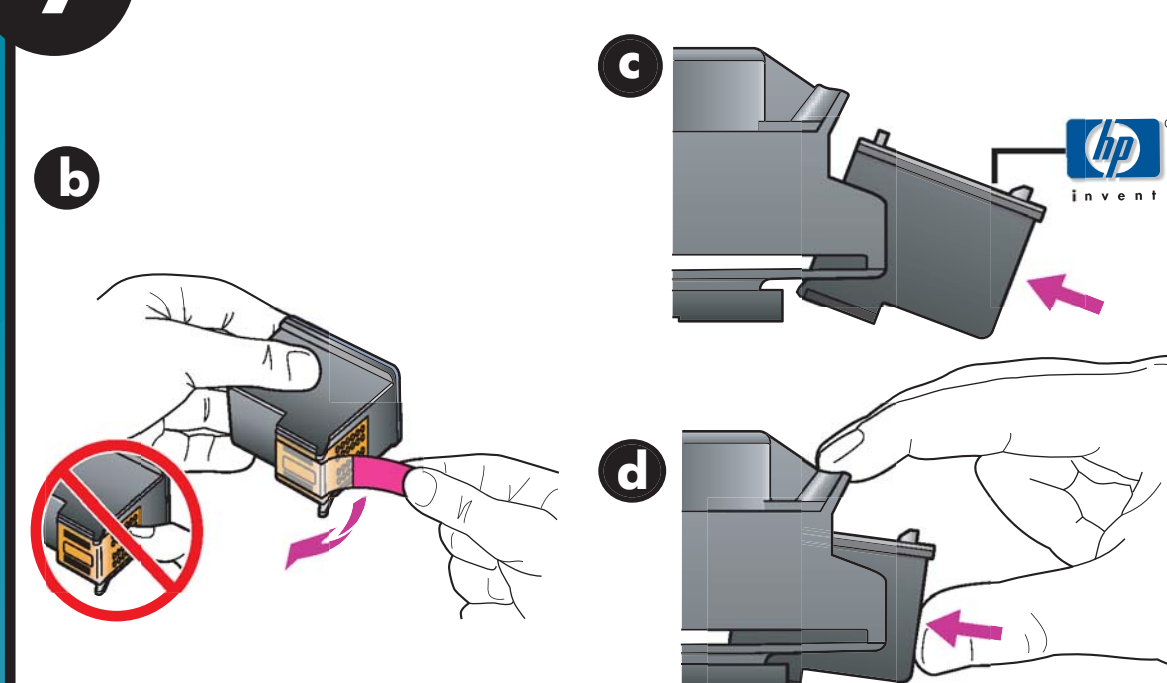

Color Black

- Use the bright pink pull-tab to remove the clear tape from the print cartridges. Do not touch the gold-colored contacts or re-tape the cartridges.


- Hold the black print cartridge with the HP logo on top. Slide the cartridge at a slight angle into the right side of the print cartridge. See the instructions on the print cartridge access door.
- Press firmly until the black print cartridge snaps into place.

- Repeat steps C and D with the color print cartridge. Make sure both cartridges are secure.

- Close the print cartridge door. A print cartridge alignment page prints. This may take up to a minute. Use this page in step 8.

8

Align print cartridges

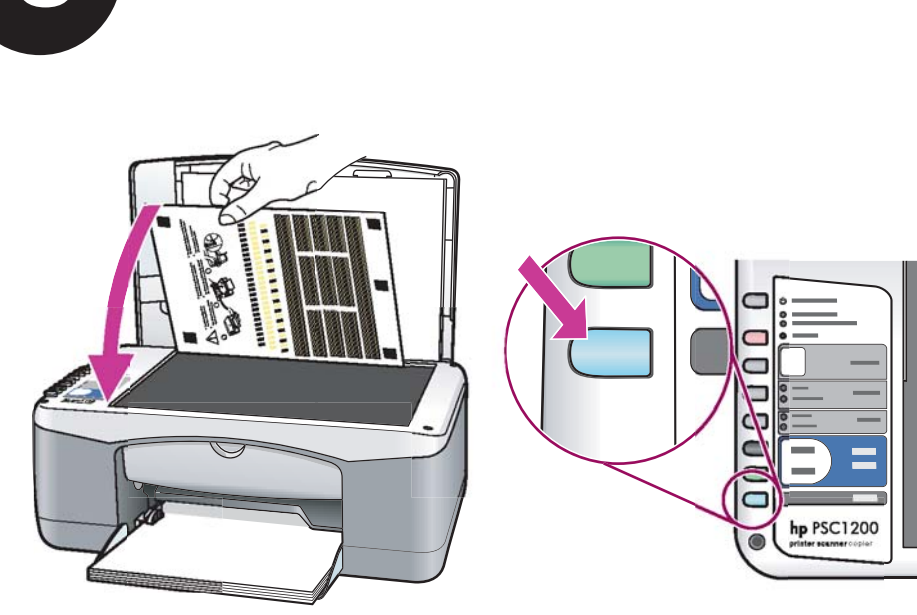

For best print quality, follow these steps:

- Place the page face down at the front left corner.
- Close the lid.
- Press the **Scan** button.
- After the ON light stops blinking, alignment is complete. Discard or recycle the page.

9

Finish software setup

Look for the screen with the green checkmark, and then continue. If you see the screen with the red "X", follow the instructions in the Readme.



10


Try the HP PSC



Congratulations! You are now ready to use the HP PSC. Double-click the HP Director icon to get started.

Make sure there are five icons in the HP Director window. If not, see the reference guide.

Macintosh Users START HERE

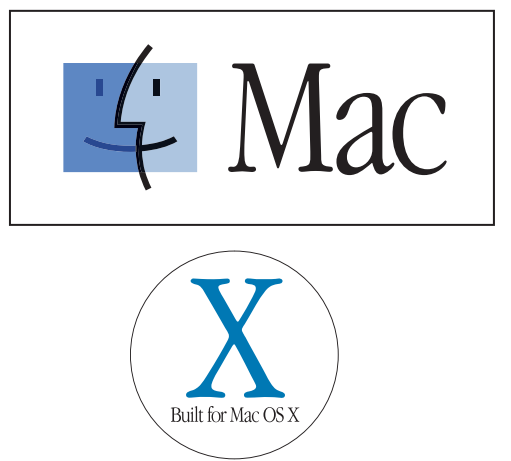

Macintosh® OS 9, OS X

Make sure you are using the correct side of the poster.
Windows users: see other side.
See your box for exact contents and requirements.

1 Attach the front panel overlay

a Lower the input tray and the print cartridge access door. Remove the packaging. Close the print cartridge access door.
b Remove the front-panel overlay from the barcode backing.
c Raise the lid. Align the overlay with the recessed area on the unit next to the buttons. Press the overlay firmly into place.

2 Load plain white paper

a **b** **c**

3 Connect the USB cable

If you have an iMac, your USB port is on the side. Do not connect the HP PSC to a USB port on a keyboard or a non-powered USB hub. See the reference guide for more details.

a **b** **c**

4 Connect the power cord

a

5 Turn on your HP PSC

The On light button turns green. This may take a few seconds.

a

6 Insert the print cartridges

a Pull the print cartridge access door down. Wait for the print carriage to move to the center.

b Remove the bright pink tape from the print cartridges. Do not touch the gold-colored contacts or re-tape the cartridges.

c Hold the black print cartridge with the HP logo on top. Slide the cartridge at a slight angle into the right side of the print carriage. See the instructions on the print cartridge access door.

d Press firmly until the black print cartridge snaps into place.

e Repeat steps c & d with the color print cartridge. Make sure both cartridges are secure.

f Close the print cartridge door. A print cartridge alignment page prints. This may take up to a minute. Use this page in step 7.

7 Align print cartridges

For best print quality, follow these steps:

a Place the page face down on the front left corner.
b Close the lid.
c Press the **Scan** button.
d After the On light stops blinking, alignment is complete. Discard or recycle the page.

8 Install the software

a Turn your Macintosh on and wait for your Macintosh to finish starting up. Insert the hp psc disc.

b Double-click the HP All-In-One Installer icon on your desktop.

c Follow the onscreen instructions. You may have to restart your Macintosh during setup. Be sure to complete the setup assistant.

9 Try the HP PSC

HP Photo and Imaging Director

Select Device: psc 1200 series

Scan Picture Scan document Make Copies Maintain Printer View and Print

Congratulations! You are now ready to use the HP PSC. See the "Quick Start" chapter in the reference guide or in the Director, click Help.

Make sure there are five icons in the HP Director Window. If not, see the reference guide.